## CR360-UTC

## Installation



## CR360-UTC

## Sensor Removal

Tools & Parts Needed

KF-1106





Disarm the system by pressing the green "unlock" button on the IR Keyfob (KF-1106).

3



Use the magnet tool (VP-1446) to twist and release the boot from the sensor.

4



To remove the sensor from the device, place VP-1477 removal tool over the sensor and gently twist to break the adhesive bond.

