

CR338

Installation

click or scan QR code
for installation video



<p>1 Tools & Parts Needed</p>  <p>*Single Hole Adapter may come installed on pedestal.</p>	<p>2 Make sure the tamper switch is fully depressed and properly aligned before mounting.</p>  <p>INCORRECT CORRECT</p>	<p>3 ADHESIVE MOUNTING (for fixtures WITHOUT overlay)</p> <p>Clean fixture surface and wipe dry. Remove the adhesive liner on the base of the pedestal and adhere the pedestal to the fixture.</p> <p>Bottom View</p>  <p>IMPORTANT: Hold for 30 seconds to ensure a strong bond.</p>	<p>4 ADAPTER MOUNTING (for fixtures WITH overlay)</p> <p>IMPORTANT: This step & step 5A are necessary if the single hole adapter is NOT already installed on the CR338 pedestal.</p>  <p>Adhesive Tape → Adhesive Liner →</p> <p>Fully remove both the adhesive liner and the tape from the bottom of the pedestal.</p>
<p>5 ADAPTER MOUNTING (for fixtures WITH overlay)</p> <p>A. Thread the pedestal power cord through the adapter and screw to the bottom of the pedestal.</p>  <p>B. Place connected pedestal and adapter through the hole in the fixture and tighten nut.</p>	<p>6 Clean the back of the device with an alcohol pad and wipe dry.</p>  <p>Plug the power coupler into sensor and device. <i>*if coupler is not plugged in, system will not alarm.</i></p> <p>Remove adhesive liner on sensor and adhere to the center of the device.</p> <p>IMPORTANT: If you are securing a glass back device, see full guide for instructions on adhering.</p>	<p>7 Attach the sensor to the pedestal by twisting the boot into the sensor.</p> 	<p>8</p>  <p>Plug the power supply into the pedestal and into an AC outlet.</p> <p>Arm the system by pressing the red "lock" button on the IR Keyfob (KF-1106). Point the keyfob near the black receiver above the LED.</p> <p><i>System is on battery only if LED is flashing quickly. Must have power plugged in to arm the system.</i></p>