

CR338

Installation

1 Tools & Parts Needed



2 Make sure the tamper switch is fully depressed and properly aligned before mounting.



3 Screw the threaded rods through the mounting ring and into the pedestal.



IMPORTANT: Adhesive mounting should only be used on the Wall Fixture. Remove the adhesive liner on the base of the pedestal and adhere the pedestal to the fixture.

4 Clean the back of the device with an alcohol pad and wipe dry.



Adhere sensor to the center of the device and plug in the power coupler.

5 Attach the sensor to the pedestal by twisting the boot into the sensor.



6 Plug the power supply into the pedestal and into an AC outlet.

Arm the system by pressing the red "lock" button on the IR Keyfob (KF-1106). Point the keyfob near the black receiver above the LED.

IMPORTANT: Please see page 46 for CR361 IR Keyfob instructions.

CR338

Pedestal Removal

IMPORTANT: Do NOT try to pull up on the CR338 base. It can damage the pedestal and/or the fixture. To remove a CR338 pedestal that's adhered to Verizon fixtures, follow the steps below.

1 Tools & Parts Needed



KF-1106




VP-1446



VP-1477

or

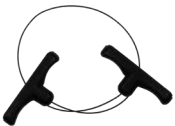

V-44

2

Disarm the system by pressing the green "unlock" button on the IR Keyfob (KF-1106).



Use the magnet tool (VP-1446) to twist and release the boot from the sensor.

3



Place the VP-1477 removal tool over the pedestal with the indentation side facing up.

4



Gently twist the removal tool to break the adhesive bond.

5



Optionally, you can use the V-44 removal tool. Wrap the removal tool's cable underneath the pedestal.

6



Alternate pulling the removal tool handles with each hand, in a sawing motion, until the pedestal is detached.